


INSTALLATION INSTRUCTION
VT-786 RD
SPOTLIGHT FITTING

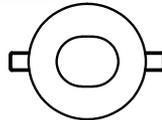

INTRODUCTION

Thank you for selecting and buying V-TAC LED product. V-TAC will serve you the best. Please read these instructions carefully before starting the installing and keep this manual handy for future reference. If you have any other query, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at the best.

INSTALLATION INSTRUCTIONS

- Switch off the power.
- Ensure that the void depth is a minimum of 90mm, the thickness of ceiling is a maximum of 20mm. (picture 1)
- Cut a hole using an appropriate tool according to cut-out (picture 2)
- Holding the spring clip upwards and with the lamp holder hanging down through the middle, offer the fitting into the hole and allow springs to pull the fitting up to the ceiling. (picture 3)
- Remove the clip and fit the bulb into the lamp holder. Insert and turn clockwise till it stops. (picture 4) Clip the bulb in the back of the bezel. (picture 4)
- Restore the power and switch on. Screw size: M3*5mm

